
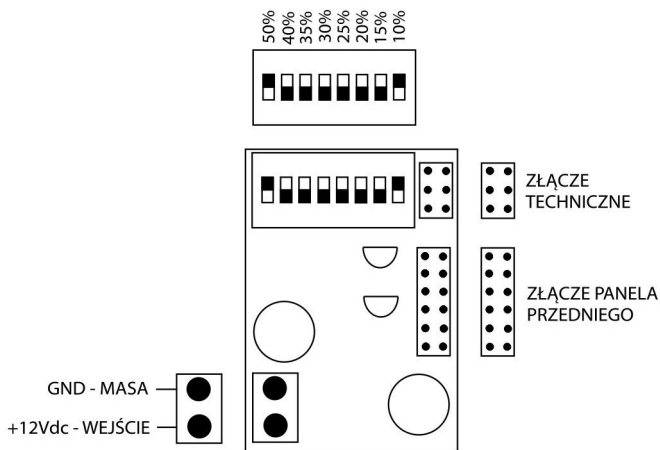


INSTRUKCJA OBSŁUGI – LOSOMAT WEWNĘTRZNY CTK – LS2

LOSOMAT WEWNĘTRZNY CTK-LS2	SYSTEM KONTROLI LOSOWEJ CYBERTECH
ZESTAW:	LOSOMAT CTK - LS2
	ZASILACZ WTYCZKOWY 230Vac/12Vdc
 The diagram illustrates the internal components of the control system. At the top, there is an 8-position DIP switch for setting the probability of control, with labels: 50%, 40%, 35%, 30%, 25%, 20%, 15%, and 10%. Below this, a central unit contains a technical connector (ZŁĄCZE TECHNICZNE) and a front panel connector (ZŁĄCZE PANELA PRZEDNIEGO). To the left, there are power input terminals labeled 'GND - MASA' and '+12Vdc - WEJŚCIE'.	
KONFIGURACJA PRAWDOPODO- BIEŃSTWA KONTROLI	System kontroli losowej ma 8 możliwych prawdopodobieństw kontroli, które użytkownik może wybrać samodzielnie. Po otwarciu urządzenia prawdopodobieństwo ustawia się na 8-segmentowym przełączniku DIP. Domyślne ustawienia fabryczne to: No. 1 - 50%, No. 2 – 40% , No. 3 -35%, No. 4 – 30%, No. 5 – 25%, No. 6 – 20%, No. 7 – 15%, No. 8 – 10%. UWAGA! Aby zapewnić prawidłowe działanie urządzenia, tylko jeden mikroprzełącznik może znajdować się w górnej pozycji (ON).
PANEL GŁÓWNY CTK-LS2	Panel posiada przycisk wyzwalający losowanie, buzzer oraz diody sygnalizujące wynik losowania po naciśnięciu przycisku. Obudowa wewnętrzna.

PARAMETRY TECHNICZNE

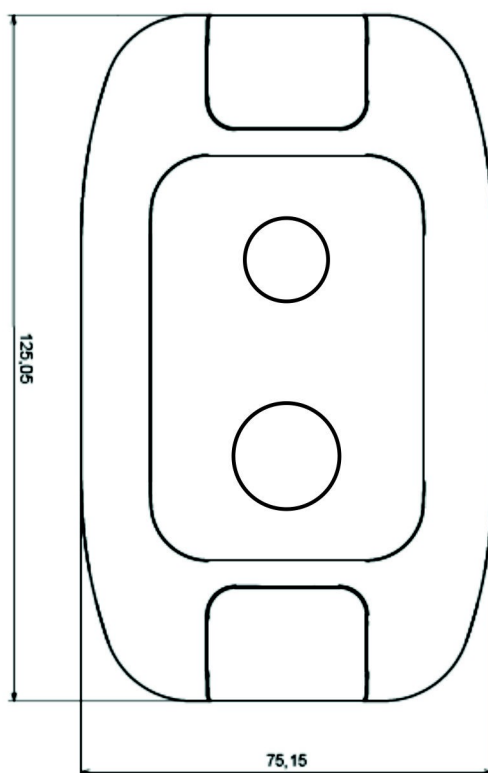

Zasilanie	12Vdc (zasilacz 230 Vac/12 Vdc w zestawie)
Pobór prądu	80mA max.
Wymiary	125 x 75 x 33 mm
Waga	160 g
Stopień szczelności	IP 40